 
 


Thank you for choosing our mobile phone!
Please read this manual before use.

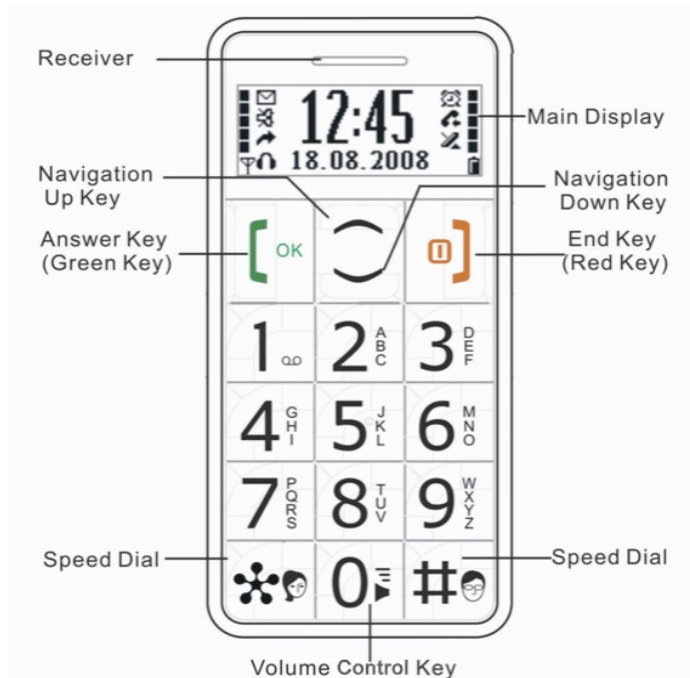


We reserve the right to upgrade the software and product and/or to make changes to this user manual without prior notice.

The icons in this user manual may slightly differ from your phone, depending on the phone you purchased. All rights reserved.

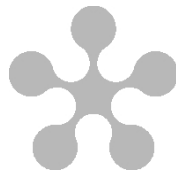

1. Safety Instructions	4
2. Getting Started	9
Install the SIM Card and Battery.....	9
Charging the Battery.....	11
Battery Level Indication Bar.....	11
Low Battery Alert.....	11
3. Your Phone	12
Key Functions.....	14
Display Screen Map.....	15
Icons on Screen.....	15
Volume Adjustment.....	16
4. Making and Receiving Phone Calls	16
To Make Calls.....	16
To Answer Calls.....	16

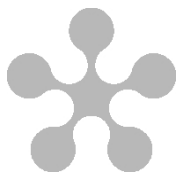

Call Waiting.....	16
During a Call, the Following Options are Available.....	17
To End a Call.....	17
To Reject a Call.....	17
To Redial a Number.....	17
Conference Calling.....	17
Making International Calls.....	18
5. Phone Book	18
Storing, Searching and Deleting Numbers in Phone Book.....	18
To Add a New Contact to Phone Book.....	19
To Search for an Existing Contact.....	19
To Copy an Existing Contact from Phone to SIM Card and Vice Versa.....	19
To Delete an Existing Contact.....	19
To Pre-Set Phone Numbers for Speed Dial.....	20
To Add the Five Emergency Contact Numbers to the Phone Book.....	20
6. SOS Emergency Button	21
When SIM Card is Inserted.....	21



When SIM Card is Not Inserted.....	21
To Deactivate SOS Emergency Button.....	21
To Set the Emergency Dial Status.....	22
7. Text Messaging (SMS).....	22
Writing and Sending a Message.....	22
Receiving a Message	22
The Following Commands are Available for Text Messaging.....	22
Letters and Numbers Input.....	23
8. Voice Mail.....	24
9. Call History.....	24
10. Digital Read-Out Option.....	24
11. Customize Your Settings.....	25
Ring Tones, Screen Brightness, Alarm, Date and Time.....	25
12. Radio.....	25
13. Flashlight.....	26
14. Other Settings	26
Silent Mode.....	26



Calculator.....	27
Reset Factory.....	27
15. Radio Frequency (RF) Exposure and SAR	27



1. Safety Instructions

This user manual includes important safety information.

Please read below instructions carefully. It may be dangerous or illegal if you do not follow these instructions.

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger.




Pay Attention to Traffic Safety

Obey local traffic laws and do not use the phone while driving. Using a cell phone while driving is dangerous and it is illegal in some areas. Radio frequency (RF) signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer of your vehicle for any equipment that has been added. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area.



Pacemaker Interference

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker in order to avoid potential interference with the pacemaker.

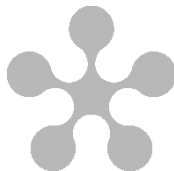



Turn Off Your Cell Phone in Medical and Health Care Facilities

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.



Switch Off on Airplanes

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless devices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.




Accessories and Batteries

Use only the approved accessories and batteries. Please do not try to use with any product that was not manufactured for use with this phone. Please be sure the phone has been switched off before taking out battery. Please dispose of scrap batteries properly according to the local regulations.



Cell Phone Should Be Turned Off Near Sites of Explosion.

Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refueling points such as near gas pumps at service stations and in any area with a potentially explosive atmosphere and obey all signs and instructions. Observe restrictions on the use of radio equipment in fuel depots, storage, chemical plants or where blasting operations are in progress.

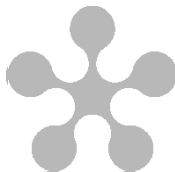



Using the Phone Correctly


Please use this phone in its normal intended position. Do not let children use the phone without supervision.

Your phone contains small parts such as SIM card, which can be accidentally swallowed by a child.



Your Phone is Not Waterproof

This phone is not waterproof. Please do not expose your phone to wet weather or environment (such as rain, snow, seawater, etc.).



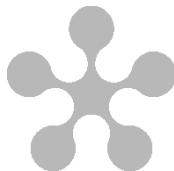


2. Getting Started


Install the SIM card and battery

Always switch the device off and disconnect the charger before removing the battery. Keep all SIM cards out of the reach of small children. For availability and information about using SIM card services, contact your SIM card vendor. This may be the service provider, network operator, or other vendor. The SIM card and its contacts are easily damaged by scratches or bending, so please be careful when handling, inserting, or removing the card.


1. Open the battery cover by lightly pressing on the back of the phone and sliding the cover panel down.
2. Install SIM card by sliding it into its nest and under the metal holding plate. (To remove the SIM card, gently press on it and slide it out of its nest.)

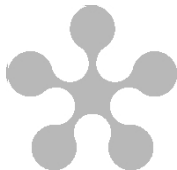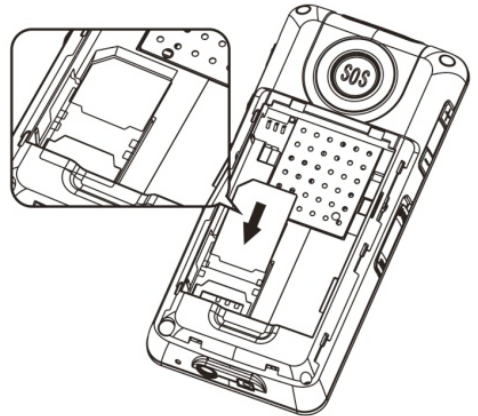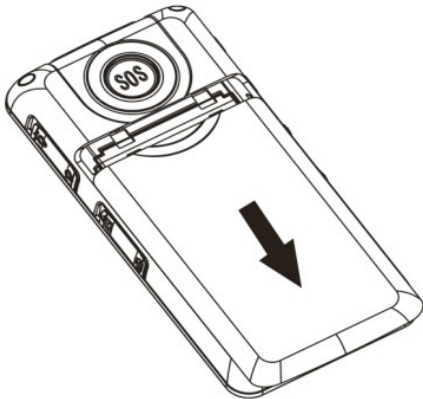


3. Install the battery into the battery slot, making sure that the three metallic stripes on the battery align with the three metallic prongs in the battery slot.

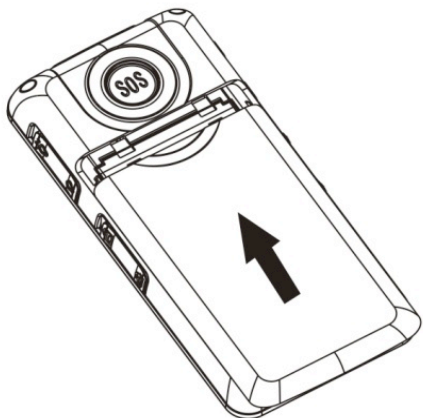

4. Put on the battery cover. Make sure the cover is completely matched and the matching sound could be heard.

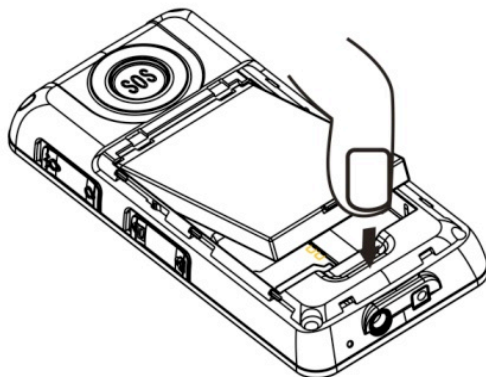

5. To turn the phone on press and hold the  key until the screen lights up. To turn it off press and hold the same key until the phone powers off.

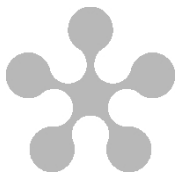


Charging the Battery

Battery can be charged when the phone is either on or off. Please make sure that the battery is inserted into the phone before charging.

Connect the charger to its port on the bottom panel of the phone, and then plug it into the 110V electrical outlet. To disconnect, first unplug the charger from the electrical outlet and then disconnect it from the phone.




Battery Level Indication Bar

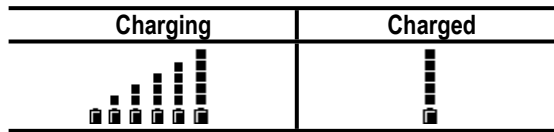

Low Battery Alert



The phone will sound an alert when the battery is low and display a message of low battery on the screen.

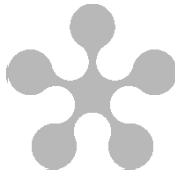


3. Your Phone


Your phone is in Stand By mode when it is on but no operation is chosen



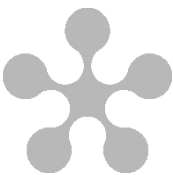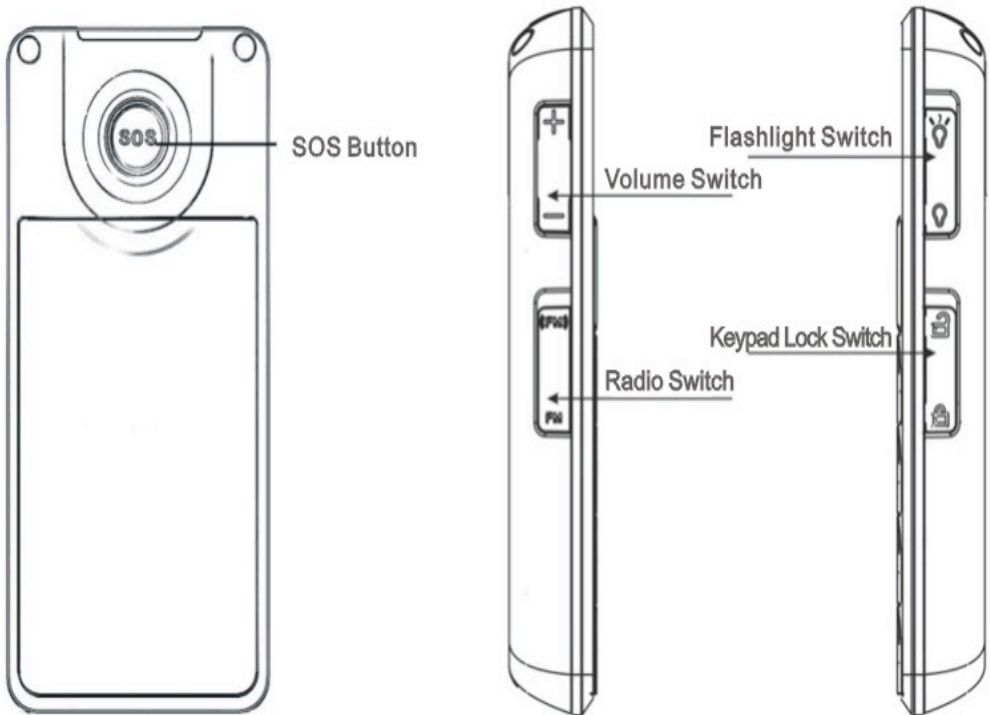

Key Functions

Key	Functions
Answer Key (Green Key)	Making Phone Calls: Press to make an outgoing call or Press to pick up an incoming call Standby Mode: Press to enter call list Operating: Press to confirm the desired function
End Key (Red Key)	Turn the Phone Off: Press and hold Turn the Phone On: Press and hold Operating: Press to cancel last command
Navigation Up Key	Standby Mode: Press to enter main menu Operating: Press to scroll up
Navigation Down Key	Standby Mode: Press to enter phonebook Operating: Press to scroll down
# Key	Standby Mode: Press and hold to call set phone number directly or press once to type in “#” symbol Editing Mode: Press to switch typing method
* Key	Standby Mode: Press and hold to call the set number directly or press once to type in “*” symbol, twice to type in “+” symbol and three times to type in “P” Editing mode: Press to access punctuation symbols list
Volume Control Key	Press to add volume during connection
Volume Switch	Press “+” to increase and press “-” to decrease the sound volume for phone or radio
FM Switch	Switch to ((FM)) position to turn the radio on and to FM position to turn it off
Flashlight Switch	Turns the flashlight on and off
Keypad Lock	Locks and unlocks the keypad
SOS Button	When Emergency Dial Status is ON: Press and hold to start emergency call When Emergency Dial Status is OFF: Press and hold this button, it will prompt out a message “Activate?” Then press  key to set the Emergency Status On and make the emergency call.

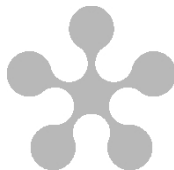








 






Display Screen Map



1. Network Signal
2. Battery Level Indication
3. Icons indicating related functions
4. Icons indicating related functions
5. Time
6. Date

Icons on Screen

 Following icons may be displayed on the screen:




	Battery Status
	Network Signal Status
	Alarm
	Unread Message
	Message Memory Full
	Call Transfer (Forward)
	Missed Call
	Silent Mode
	Roaming
	Headset is Connected
	Keypad is Locked
	New Message Indication in Locked Keypad Mode
	Missed Call Indication in Locked Keypad Mode
	New Message and Missed Call Indication in Locked Keypad Mode



Volume Adjustment

During a normal or hands-free call connection, press and hold Volume Control key to increase the volume.

Or, to set the volume level:

Press the  navigation key up to access the menu. Select "Settings", then "Personalize", then "Volume Adjust", then "Keypad Voice Volume" by pressing the  key select each command. Then adjust volume as desired by using the Volume Switch on the left side of the phone. Press the  key when done to save your setting.

You can also adjust the volume of the call by pressing "+" or "-" key on the left side panel of the phone while connected.

4. Making and Receiving Phone Calls

To Make Calls:

Enter a number and press . To delete a digit press  key. Press and hold  key to clear the screen.

To Answer Calls:

When your phone rings or vibrates, press .

Call Waiting:

To answer a new incoming call ("call waiting") press  key. You will be connected to the new caller and your current call will be put on hold. If you press  key, second call will end and the first call will be resumed.



During a Call, the Following Options are Available:

“Mute”

“Unmute”

“Speaker On”

“Search Contact”

To activate these commands, during a call, press  key, scroll down or up to desired command by using  key and press  key again.





To End a Call:

Press .

To Reject a Call:


Press  when your phone rings or vibrates.

To Redial a Number:



From the home screen, press  to see a list of command options. When “Dialed Call” option appears press  again. Then scroll down to desired number by using  key and once you find the entry you want to call press .



Conference Calling:

This phone supports conference call option for three parties (on two connection path). This function requires network support. Please contact your network provider to activate this option. Additional service charges may apply.


- Method one: Answer incoming call or dial out. When connected, dial out another call by typing the phone number directly by using keypad or by pressing  key and scrolling down to “Search Contact” option to find the number in the phone book. The first (current) call will be put on hold



while you are dialing out. When your second call is connected, press  key and scroll down to select "Make Session" option. Press  key again, all three callers are now connected.

- Method two: Answer incoming call or dial out. If you get another incoming call, activate "call waiting" by following instructions above in the Call Waiting section. When the second call is connected, press  key and scroll down to select "Make Session" option. Press  key again, all three callers are now connected.



Making International Calls:







- Press the " * " key twice, a "+" character will appear on the screen. Enter country code, area code and phone number as instructed by your long distance network service carrier. Press  key.
- To display "P" symbol for international calling, press the " * " key three times.

5. Phone Book


STORING, SEARCHING AND DELETING NUMBERS IN PHONE BOOK






Phone numbers can be stored in the phone memory directly or on the SIM card.

 symbol indicates that the contact is saved in the phone memory and  symbol indicates that it is saved on the SIM card. To preset a default path for storing the phone numbers:

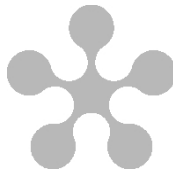





- Press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Settings" option is displayed. Press . Scroll up or down to "Store Numbers To" option, press . Scroll up or down to select desired path, press .

You can store up to 100 entries in the phone memory. SIM card storage space is determined by network provider. To see how many available entries are left in the contact list:









- Press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Settings" option is displayed. Press . Scroll up or down to "Storage State" option, press  to see available memory.







To Add a New Contact to Phone Book:

- Press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "New Contact" option is displayed. Press . Enter the name of new contact, press . Enter the phone number of the new contact, press .

To Search for an Existing Contact:


- Press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Search" option is displayed. Press . Scroll up or down to search for the contact (or enter the contact name by using key pad). Press .
Or
- Press  key down and scroll to desired record.



To Copy an Existing Contact from Phone to SIM Card and Vice Versa:

- Press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Copy Contact" option is displayed. Press . Scroll up or down to select the desired copy path. Press . Scroll up or down to select "Copy One" or "Copy All". Press  once to copy one number or twice to copy entire contact list.

To Delete an Existing Contact:

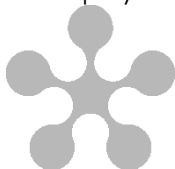





- Press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Delete Contact" option is displayed. Press  twice until contact list is displayed.










Scroll up or down to the contact you wish to delete by using  key (or enter the contact name by using key pad). Press  twice to delete the contact.






To Pre-Set Phone Numbers for Speed Dial:







Up to 10 phone numbers can be set for speed dial on number keys from 2 to 9, " * " key and "#" key.


- To set a contact for a speed dial, press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Speed Dial" option is displayed. Press . Scroll down to an "Empty" position, press  twice until contact list is displayed. Scroll up or down to the contact you wish to set for speed dial in this location (or enter an existing contact name by using key pad). Press  to set the contact.

- To delete or edit a contact from a speed dial, press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Speed Dial" option is displayed. Press . Scroll down to find the entry you'd like to delete or edit. Press , then scroll down to "Edit" or "Delete" option. Press  to delete the contact from speed dial or scroll to another contact and then press  to replace the current entry with another.

To Add the Five Emergency Contact Numbers to the Phone Book:

- To enter new numbers, press  key up to access the menu. Select option "Phone Book" by pressing . Press  key up or down until "Emergency Number" option is displayed. Press  three times, input the phone number, press . Repeat up to four times. Please note, to improve the chances of getting an answer, it is best to enter all five numbers.

- To change an existing emergency phone number, press  key up to access the menu. Select option "Phone Book" by pressing  key. Press  key up or down until "Emergency Number" option is displayed. Press , then scroll down to "Edit Record" option, press  twice, edit number by using key pad, press  to save the new number.

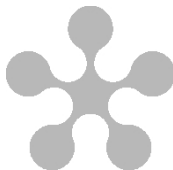

6. SOS Emergency Button


Important Notice: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programmed functions. Because of this, connections in all conditions and/or locations cannot be guaranteed. You should never rely solely on any wireless device for medical emergency communication.

When SIM Card is Inserted

If the Emergency Dial Status is On:

In case of life-threatening emergency you can press and hold the large "SOS" button on the back of the phone. When this is done, your phone will automatically send the pre-set emergency text message to each of the five emergency contact numbers. Your phone will then start dialing the five emergency phone numbers until a call is answered. If there are no emergency numbers set, the phone will dial 911. A loud alarm will sound while all this is performed to attract attention to your situation. When a call is answered, your phone will activate the speakerphone mode so you could speak into it hands-free. There will be three cycles and if a call will fail to connect, your phone will dial the next number on the list. If there is no answer after the three cycles, the phone will stay in this emergency mode for one hour and if an incoming call comes in during this hour, it will be answered in the speakerphone mode. After an incoming call is answered, the phone will go back into its normal mode.

If the Emergency Dial Status is Off:


Press and hold the "SOS" button on the back of the phone. This will prompt a message on the screen: "Activate?" Press  key and select option "On".

When SIM Card is Not Inserted






If "SOS" button is pressed, the phone will dial 911.

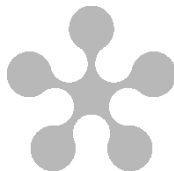To Deactivate SOS Emergency Button:

Press and hold it again.











To Set the Emergency Dial Status:


 

- Press  key up to access the menu. Select option "Phone Book" by pressing  key. Press key up or down until "Emergency Number" option is displayed. Press . Scroll down to option "Status", press , scroll to "On" or "Off" option as desired, press .

7. Text Messaging (SMS)

Writing and Sending a Message:


- Press  key up to access the menu. Select option "SMS" by pressing  key. Press  key up or down until "New Message" option is displayed. Press  twice and start typing your text. When done press  twice, input a phone number by typing it directly or press  to search for a number in your phone book. Press  to send your message. You can also access a stored message in your inbox and reply to it by selecting option "Inbox" instead of "New Message" and following the same commands. Also, once you typed your message, before sending it you can scroll up or down by using the  key and select other commands such as "Save", "Insert Number", "Insert Template", etc.

Receiving a Message:

When you receive a new text message, your phone will display a  icon and "New SMS" notification. Press  twice to read the message. Press  again to see a list of available commands such as "Reply", "Delete", etc.

The Following Commands are Available for Text Messaging:

- "Reply" – reply to sender of the message
- "Transfer" – forward this message to others

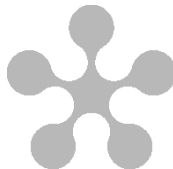

“Delete” – delete this message

“Dial” – call the sender of this message

“Use Number” – save the sender’s phone number in your phone book

“Insert Template” – use one of the 5 pre-edited message templates


“Send to Many” – send this message to multiple recipients

“Save” – save this message as a draft to edit and/or send it later

“Emergency” – use this option to pre-edit your emergency text message for “SOS” button function






Letters and Numbers Input:

English letters are set on number keys from “2” to “9”. You can input numbers, upper or lower case letters and punctuation symbols. Pressing “#” key while typing lets you switch between the different types of input modes.

- Each number key is set for three or four letters. Press the number key one time to display the first letter, two times to display the second letter, etc.
- To enter punctuation, press the “ * ” key to display the list of punctuation symbols and then use number keys “2”, “8”, “4” and “6” to navigate between the symbols. Press number key “5” to select and enter a symbol into your message.
- To enter a number instead of a letter, press “#” key to switch input mode from letter to numerical and then use number keys from 1 to 0 to enter numbers. Press “#” again to switch back to letter input mode.
- To enter a space, press “0” key when in letter mode.
-  icon on the screen means that your message box is full. Please delete some messages to clear the memory.






8. Voice Mail

- Your voice mail access number has to be provided by your network carrier. Once you know that number, this is how to save it in your phone: Press  key up to access the menu. Select option "SMS" by pressing . Press  key up or down until "Voicemail" option is displayed. Press  twice and type in the voice mail access phone number provided by your network carrier. Press  to save.
- To dial your voice mail inbox press and hold "1" on the key pad. IF by Pressing "1" button on your phone will not take you to your voicemail we suggest you to call your carrier and ask your voicemail number which you can store as a fast dial on your keyword afterwards.

9. Call History

This option stores recently dialed calls, received calls and missed calls. Your phone can store up to 20 records for each function.

Press  key up to access the menu. Select option "Call History" by pressing . Press  key up or down to scroll through available functions, press  to select the desired function.


Also Available Under "Call History":


"Talk Time" – lets you see the duration of a completed call



"Delete All Records" – permanently clears all dialed, missed and received call records from memory

10. Digital Read-Out Option

A digital voice reads out the numbers as you dial them.

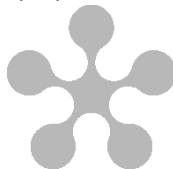



- To turn this option on or off: Press  key up to access the menu. Select option "Settings" by



pressing . Press  key up or down to find "Dial Read-Out" command, press , scroll to "On" or "Off", press  to set.

11. Customize Your Settings



Ring Tones, Screen Brightness, Alarm, Date and Time


- Press  key up to access the menu. Select option "Settings" by pressing . Press  key up or down to scroll through available functions, select "Personalize" by pressing . Scroll through options and make changes as desired.
- The clock on this phone supports only 24 hour time system.





12. Radio

Find It: "{(FM)} FM" (a switch on the left side of the phone)

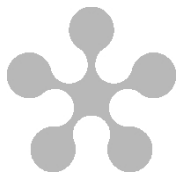You can listen to the radio on the speaker phone or connect the headset into the headset jack.

- Turn the "{(FM)} FM" switch to "{(FM)}" position to turn the radio on (or turn it to FM position to switch it off).
- To scan for stations press the " * " key. To continue scanning, press  to find the next station.
- To stop scanning press the  key.



- To enter a channel directly, exit the scan mode first (by pressing  key) and then input the frequency by pressing number keys followed by  key.
- To adjust volume, press the "+" or "-" keys on the left side of the phone.
- To mute the radio, press  key. To resume press the  key again.
- To turn the radio off switch to "FM" position.
 - *The quality of radio sound depends on signal quality at your particular location.


13.Flashlight

Use the switch indicated by light bulb icons on the right side of the phone to turn the built in flashlight on or off.

14.Other Settings

Silent mode

Choosing this option will silent all ring tones and alerts. You can set the duration of silent mode according to your requirement. The silent mode will switch automatically to normal mode after the set duration expires. Choose "0" for permanent silent mode. When your phone is set to silent mode,

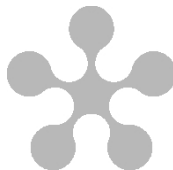

an icon indicating so will appear on the screen.

Calculator

Input digits by using the key pad. On the left part of the screen select a function by scrolling up or down using  key and the pressing . Press  to calculate.

Reset Factory

This option clears personalization and restores settings to original.


15. Radio Frequency (RF) Exposure and SAR

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES

Your mobile device is a radio transmitter and receiver. It is designed and manufactured not to exceed the limits for exposure to radio frequency (RF) recommended by international guidelines (ICNIRP). These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The exposure standard for mobile devices employs a unit of measurement known as the Specific Absorption Rate, or SAR. Although the SAR is determined at the highest certified power level, the actual SAR of the device while operating can be well below the maximum value. This is because the device is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a base station, the lower is the power output of the device.

SAR values may vary depending on national reporting and testing requirements and the network band. Use of device accessories and enhancements may result in different SAR values.

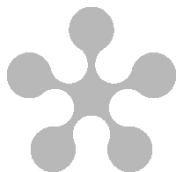

The SAR limit for mobile devices used by the public is 2.0 W/kg (Watts per Kilogram) averaged over 10 grams of body tissue. The guidelines incorporate a substantial margin of safety to give additional protection for the public and to account for any variations in measurements. The highest SAR value this model phone tested for while in use is 0.873 W/kg.

